

PRINTED 31 MARCH 2016 - 3:54PM BY JAMAR HUDSON

- 1. N.I.S.T. H-44 requires that on the entrance and exit ends of a vehicle scale, there shall
  - 1.2. The lenght of at least one-half the length of the platform but not required to be
- 1.3. Any slope in the remaining portion of the approach shall ensure ease of vehicle access, ease for testing purposes, and drainage away from the scale. 2. N.I.S.T. H-44 requirements and local weights and measures regulations may require
- installation parameters somewhat different than illustrated on this plan. In order to insure compliance, consult the local Fairbanks service office prior to installation. Refer to manual for all installation and operation instructions
- 4. Fairbanks does not recommend using foundation or ground installed guide rails along the sides of the truck scale platform. Damage may occur to the scale if the vehicle hits the guide rail, transferring damaging forces to the platform and the checking system. usage of this style guide rail will void the product warranty. If guide rails are necessary, please
- 6. On steel deck scale, pay close attention to deck seams when they are not centered on the width of the module. Install the scales in the proper orders and with the proper

- 1. Install (2) 3/4" x 8'-0" long ground rods (to project 4"). Two ground rods are supplied
  - for cable to scale indicator (may be located on any pier adjacent to mounted
- 1.2. One for grounding scale weighbridge. power supply ground must be separate from 2. Install minimum 1 1/2" conduit for cable from junction box to scalehouse. Conduit to
- extend 2" above the top of the pier (not supplied by Fairbanks Scales). 3. If alternating current (AC) is required near the scale, it shall not run closer than 36" in