



Parcel Dimensioner Shipping Scale “Quick Start” Bulletin 04/21


*****The instructions in this bulletin assume that all assembly steps and connections have been completed.*****

Powering on the System:


1. Remove any objects/weight from the scale.
2. Power on the PC using the power switch on the mini PC located behind the display.
3. Once the PC is turned on, the switch will turn blue to indicate the unit is booting




4. Verify the power on the display (monitor) indicated by the **red** LED on the top.

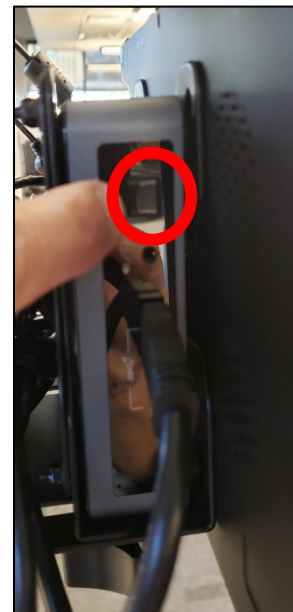

5. Wait for the system to fully boot. Once complete, the screen will show that it is ready to scan.

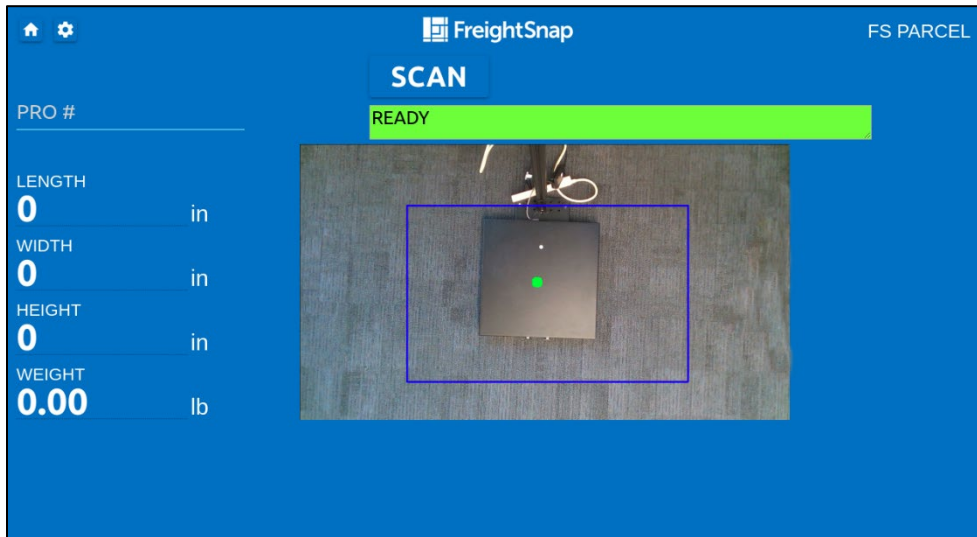

6. Once the system is booted, dashes appear on the scale. Press the **ZERO** key and the scale will show the Center of ZERO.

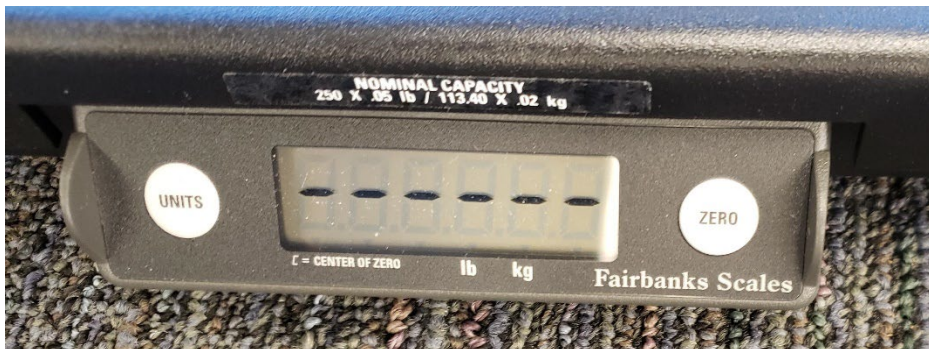

7. The dimensioner is now operational. Place a box on the scale to begin.



NOTE: On the screen, a blue box surrounds the scale. This is the area where the camera system picks up the package. It is important to note that nothing can be within this boundary area while the camera is scanning. Otherwise, you will get a "Boundary Error."

