

9'-6"

3'-7"

11'-6"

4'-6"

11'-6"

<u>9'-6"</u>

<u>2'−7"</u> 1'−0"

<u>11'-6"</u>

<u>4'-6"</u>

<u>11'-6"</u>

TOTAL WEIGHT

152

504

216

138

1309

AR2

HR1

HR2

HR3

Minimum thickness

as required for

concrete or ashpalt.

Section

0 0

@ @ **(©**;

@ @ **@**

INTERIOR PIER DETAIL

typical all interior sections

24

42

72

18

#5

#4

#4

- 1. Foundation shown is designed for soils with a minimum bearing capacity of 3000 psf and adequate drainage. if soil conditions do not meet these requirements, adjust foundation
- 2. In areas of the country where there is severe freezing, increase the depth of the foundation so that the bottom extends below the frost line, or provide a minimum of 12"
- 3. N.I.S.T. H-44 requires that on the entrance and exit ends of a vehicle scale, there shall be a straight approach that is:
 - 3.1. At least the width of the platform. 3.2. The length of at least one—half the length of the platform but not required to be more than 40ft, and
 - 3.3. Any slope in the remaining portion of the approach shall ensure ease of vehicle
- access, ease for testing purposes, and drainage away from the scale. 4. N.I.S.T. H-44 requirements and local weights and measures regulations may require
- installation parameters somewhat different than illustrated on this plan. In order to insure compliance, consult the local Fairbanks service office prior to installation. 5. Refer to manual for all installation and operation instructions.
- 6. Fairbanks does not recommend using foundation or ground installed guide rails along the sides of the truck scale platform. Damage may occur to the scale if the vehicle hits the guide rail, transferring damaging forces to the platform and the checking system. usage of this style guide rail will void the product warranty. If guide rails are necessary, please
- 7. A minimum of 24" of clearance is required on both sides of the scale in order to access load cells, electronics, and checking hardware.

REINFORCING STEEL NOTES

- 1. Reinforcing steel are to be ASTM 615, Grade 60 or equal. Bend bars cold to conform with required details. Rebar shall be free of all mud, debris, cement grout, loose rust, grease and oil that would impair bonding. Space bars properly and tie securely in position before pouring concrete. Tack welding of bars is prohibited 2. Rebar cover:
 - 2.1. Concrete cast against earth: 3"

use fairbanks accessory rub rails.

2.2. Formed concrete exposed to earth or weather: 2" 2.3. Cover at termination end of rebar: 3"


GROUNDING AND ELECTRICAL NOTES:

- 1. Install (2) 3/4" x 8'-0" long ground rods (to project 4"). Two ground rods are supplied
- 1.1. One for grounding intalogix power supply. position to match location of conduit for cable to scale indicator (may be located on any pier adjacent to mounted
- 1.2. One for grounding scale weighbridge, power supply ground must be separate from
- weighbridge ground. 2. Install minimum 1 1/2" conduit for cable from junction box to scalehouse. Conduit to
- extend 2" above the top of the pier (not supplied by fairbanks scales). 3. If alternating current (ac) is required near the scale, it shall not run closer than 24" in parallel with any load cell or other signal carrying cable.

120,000lb CLC, 125ton Capacity

MODEL: PLT-6020-120-A-011-060

SCALE: NTS DRAWN:JNO CHECKED: SHEET: 1 OF 1 DATE: 11/14/14 APPROVED: D165160A-AP

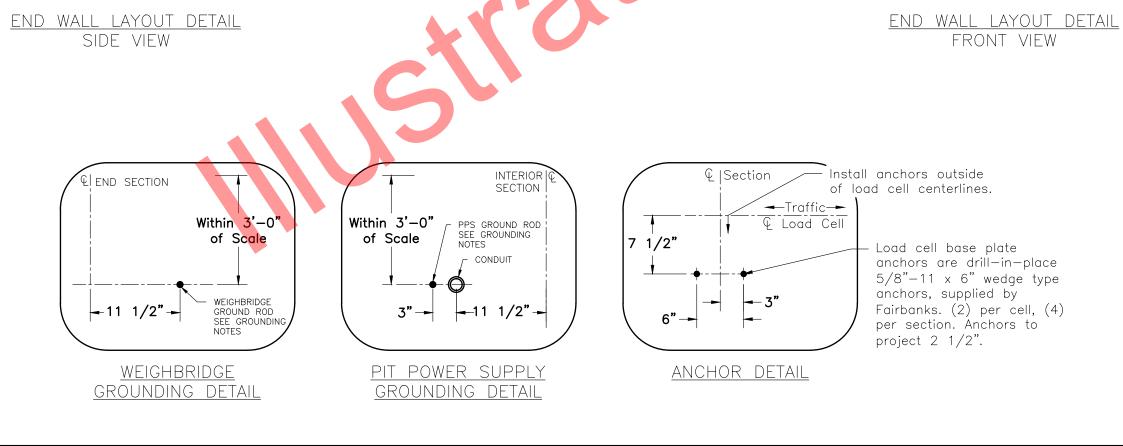

1'-6"

(6) HR3 @ 9"

(6)

()

1'-7 7/8"

₽¦Section

END PIER DETAIL

typical both end sections

(14) HR2 @ 12" O.C

Minimum thickness

as required for

concrete or ashpalt.

1'-6"

Remove all top soil. The subgrade

APPROACH COPING L3"x3"x1/4" SUPPLIED WITH SCALE

BOLT OR LAG COPING

TO FORMS BEFORE POURING APPROACH

USE PROVIDED 3/4"x3" BOLTS TO SECURE END BUMP PLATE

TO FORMS. MUST BE FLUSH

WITH FACE OF END WALL.

must be firm and unvielding.

Compact if necessary and as

required. Backfill with the best

available material, aggregate

preferred.

TOP OF APPROACH

TOP OF PIER OR SLAB

EMBEDDED END — BUMP PLATE

ASSEMBLY