



SECTION A-A

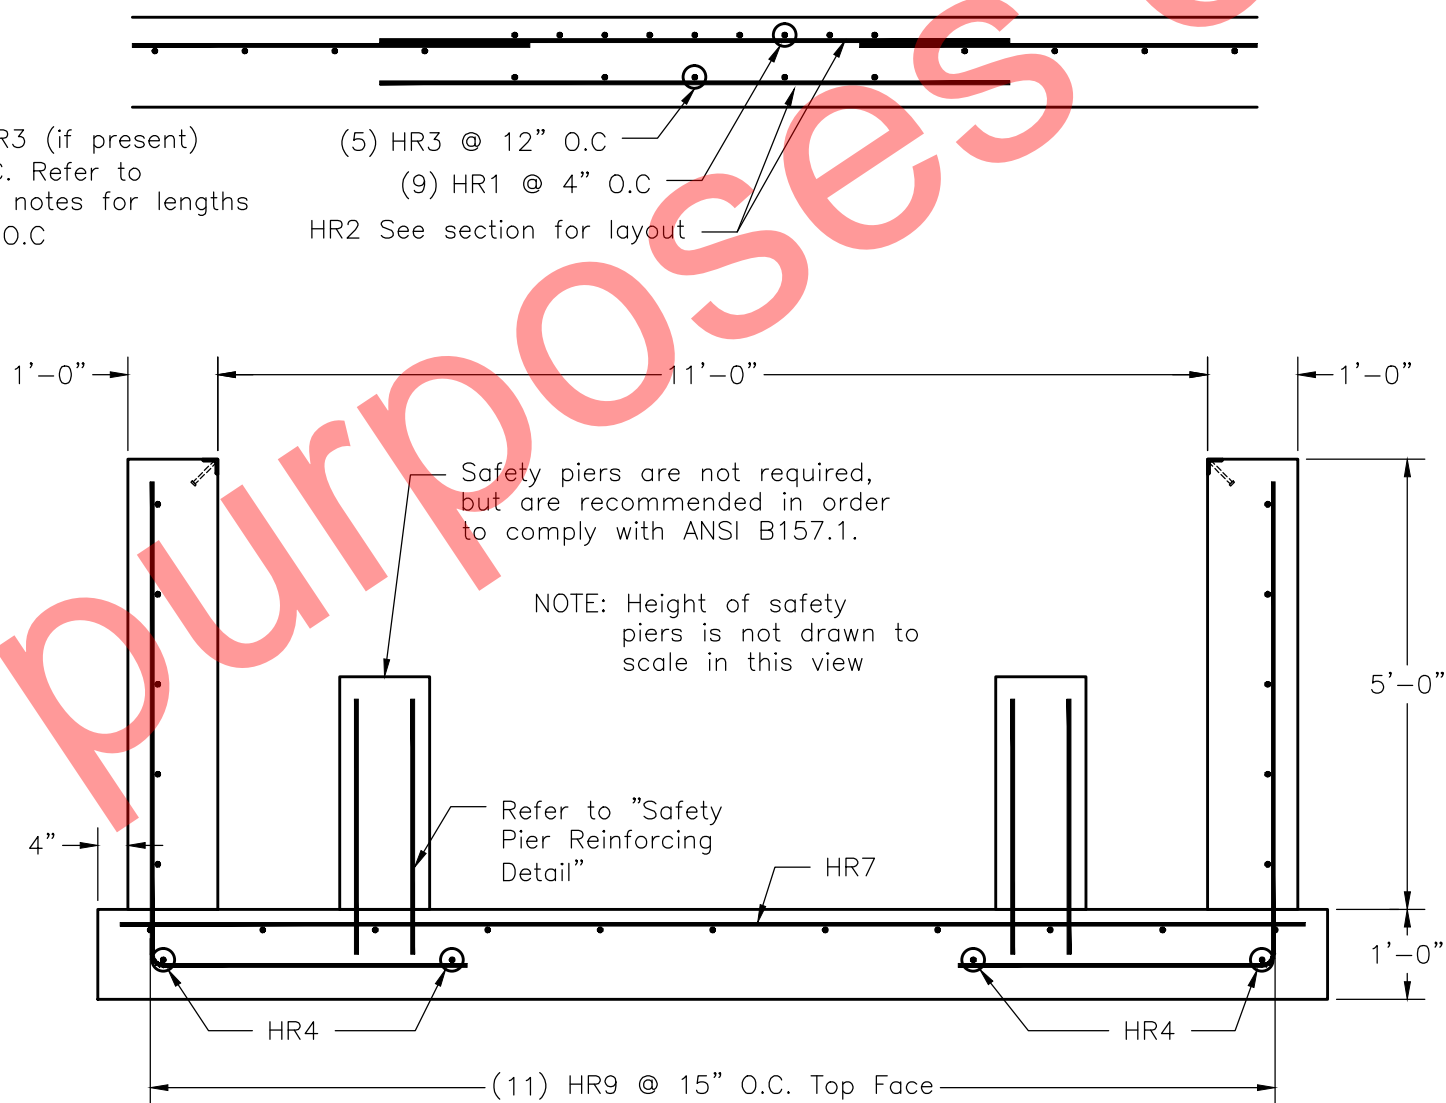

SECTION B-B

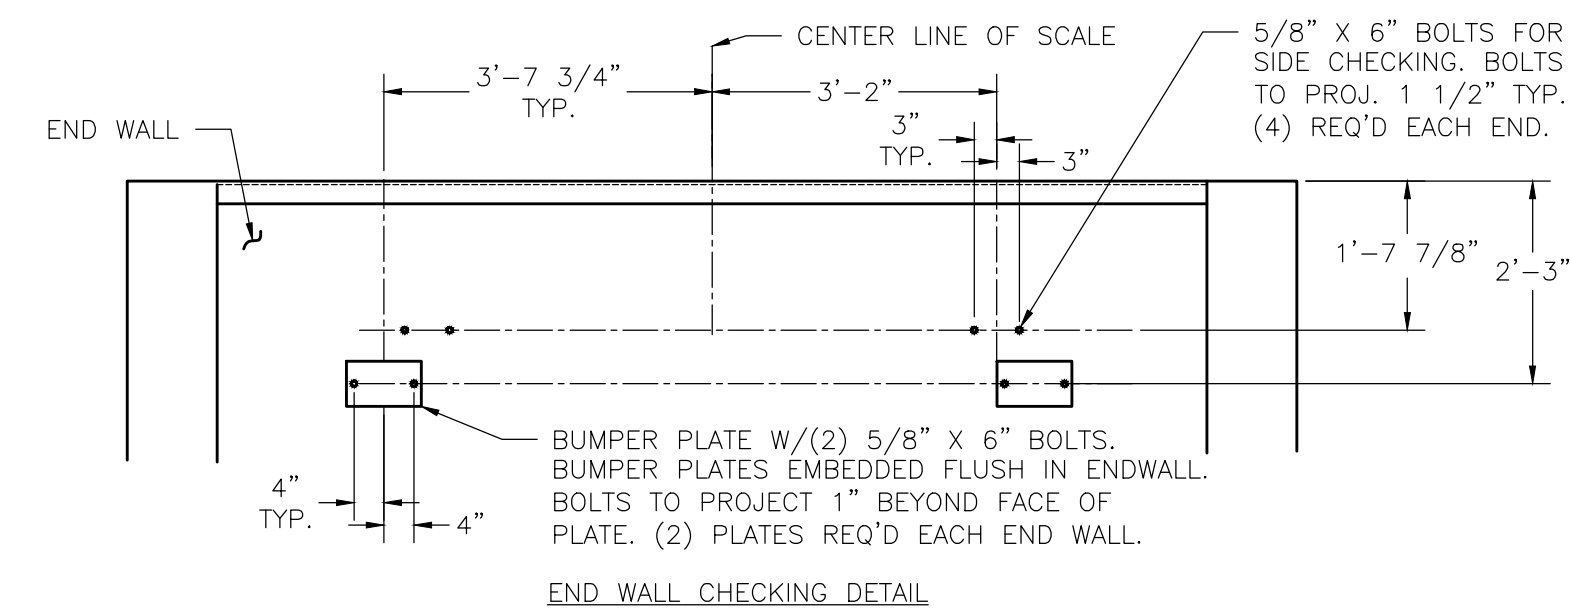

END WALL CHECKING DETAIL

FOUNDATION REINFORCING SCHEDULE					
ASTM 615 - GRADE 60					
MARK	QTY	SIZE	LENGTH	BENDING	WEIGHT (LBS)
BR1	124	#4	9' - 0"	5' - 6" [3' - 6"]	745
BR2	26	#6	6' - 10"	4' - 10" [2' - 0"]	267
BR3	16	#4	4' - 0"	2' - 0" [2' - 0"]	43
HR1	36	#6	13' - 2"	13' - 2"	712
HR2	92	#4	7' - 0"	7' - 0"	430
HR3	20	#4	13' - 2"	13' - 2"	176
HR4*	56	#4	17' - 0"	17' - 0"	636
HR5	8	#4	12' - 6"	12' - 6"	67
HR6	32	#4	2' - 6"	2' - 6"	53
HR7	48	#4	3' - 1"	3' - 1"	99
*Splice (4) HR4 to make 62'-10" in slab, 62'-2" in side walls.					
MIDSPAN REBAR BETWEEN LOAD CELL SECTION					
MR1	45	#4	13' - 2"	13' - 2"	396
MR2	33	#4	15' - 1"	15' - 1"	332
WWR 6x6 D10.0/D10.0 (Grade 60) can be used in place of midspan rebar. Approximately 590sq. ft. required.					
APPROACH REBAR					
AR1	20	4	12' - 6"	12' - 6"	167
AR2	26	4	9' - 6"	9' - 6"	165
Total Weight					4288

FOUNDATION CONCRETE		
3500 PSI MINIMUM		
LOCATION	QTY (CU. YDS)	
SLAB	32.25	
WALLS	28.75	
PIERS	5.25	
SAFETY PIERS	1.00	
APPROACHES	6.50	
TOTAL CONCRETE		73.25
MINIMUM EXCAVATION		305.50
CLEARANCE DIMENSION		36"

GENERAL NOTES


- Excavation, foundation forms, rebar, and concrete to be furnished by contractor or customer.
- Foundation shown is designed for soils with a minimum bearing capacity of 1500 psf and adequate drainage. If soil conditions do not meet these requirements, adjust foundation or soil as required. The design is adequate for a highway surcharge of 300psf.
- Work from centerlines when erecting forms and placing embedded items. Place anchor bolts within $\pm 1/8"$ of positions indicated in drawing.
- In areas of the country where there is severe freezing, increase the depth of the foundation so that the bottom extends below the frost line, or provide a minimum of 12" free draining granular material to prevent frost heave.
- N.I.S.T. H-44 requires that on the entrance and exit ends of a vehicle scale, there shall be a straight approach that is:
 - At least the width of the platform.
 - The length of at least one-half the length of the platform but not required to be more than 40ft. and
 - Any slope in the remaining portion of the approach shall ensure ease of vehicle access, ease for testing purposes, and drainage away from the scale.
- N.I.S.T. H-44 requirements and local weights and measures regulations may require installation parameters somewhat different than illustrated on this plan, particularly in regard to pit depth and approaches. In order to insure compliance, consult the local Fairbanks service office prior to installation.
- Refer to manual for all installation and operation instructions.
- Fairbanks does not recommend using foundation or ground installed guide rails along the sides of the truck scale platform. Damage may occur to the scale if the vehicle hits the guide rail, transferring damaging forces to the platform and the checking system. Usage of this style guide rail will void the product warranty. If guide rails are necessary, please use fairbanks accessory rub rails.
- A minimum of 24" of clearance is required on both sides of the scale in order to access load cells, electronics, and checking hardware.

CONCRETE AND REINFORCING STEEL NOTES


- All concrete material and workmanship to be in accordance with the current American Concrete Institute (ACI) code requirements.
- All concrete to be a minimum of 3000psi at 28 days.
- Reinforcing steel are to be ASTM 615, Grade 60 or equal. Bend bars cold to conform with required details. Rebar shall be free of all mud, debris, cement grout, loose rust, grease and oil that would impair bonding. Space bars properly and tie securely in position before pouring concrete. Tack welding of bars is prohibited.
- Rebar cover:
 - Concrete cast against earth: 3"
 - Formed concrete exposed to earth or weather: 2"
 - Cover at termination end of rebar: 3"
- The top of all load bearing piers must be smooth, flat, level, and in plane with one another in order for load cell plates to bear properly. Vertical rebar for piers may be optionally drilled-and-epoxied in place. Some states require that concrete piers be poured monolithic with the side walls (recommended method).

GROUNDING AND ELECTRICAL NOTES:


- Install (2) 3/4" x 8'-0" long ground rods to project 4" Tie ground rods to slab rebar.
 - One for grounding Intalogix Power Supply. Position the ground rod to match the chosen location for the PPS. The PPS may be located at any section.
 - One for grounding scale weighbridge. Place within 3ft of a main beam, at any convenient location. The power supply ground must be separate from weighbridge ground, and should be at least 4'-0" from power supply ground.
- Install minimum 1 1/2" conduit for cable from junction box to scalehouse. Suitable conduit for low voltage conductor shielded cable must pass through the wall at any point above pier tops that is convenient. Conduit to extend a minimum of 2" beyond the surface. Conduit is not supplied from the factory.
- If alternating current (AC) is required near the scale, it shall not run closer than 36" in parallel with any load cell or other signal carrying cable.

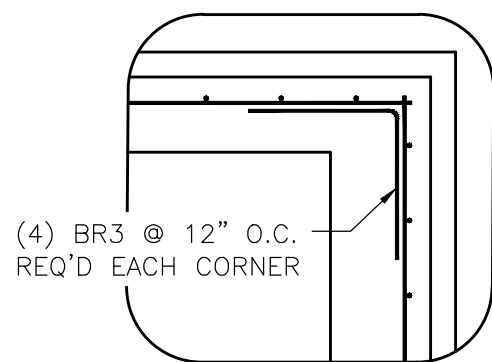

CORNER REINFORCING DETAIL

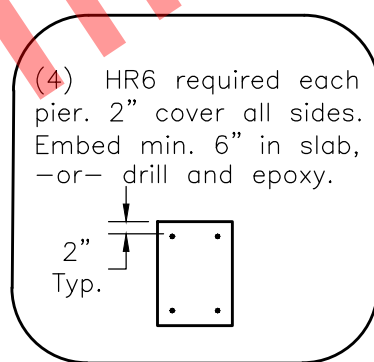


PIER REINFORCING
Top View

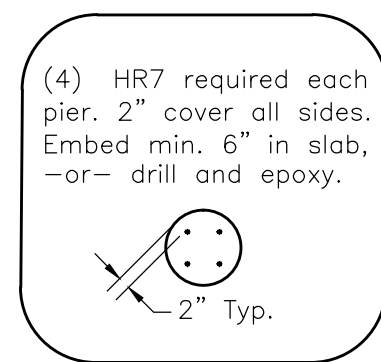

SAFETY PIER REINFORCING
Top View

THE INFORMATION CONTAINED HEREIN AND IN ANY ACCOMPANYING DOCUMENTS IS THE PROPERTY OF FAIRBANKS SCALES. IT IS TO BE USED FOR THE PURPOSES SPECIFIED HEREIN ONLY. FAIRBANKS SCALES ASSUMES NO RESPONSIBILITY FOR ALTERATIONS TO THIS DOCUMENT AFTER ORIGINAL TRANSMISSION.

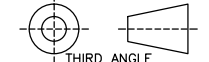

60' x 11' Tundra XL Field Pour 60,000lb CLC, 100ton Capacity
SCALE: NTS
DRAWN: JH
CHECKED: JH
SHEET: 1 OF 1
DATE: 2/2/18
APPROVED: JH
DRAWING NUMBER: D-B166160-BP60
MODEL: PLT-2600-060-B11-060

FAIRBANKS SCALES
1500 W. 10TH AVE.
FAIRBANKS, AK 99701
PHONE: 907.452.1234
FAX: 907.452.1235
WWW.FAIRBANKSCALES.COM
SCALE: NTS
DRAWN: JH
CHECKED: JH
SHEET: 1 OF 1
DATE: 2/2/18
APPROVED: JH
DRAWING NUMBER: D-B166160-BP60
MODEL: PLT-2600-060-B11-060